

BSR idware GmbH
Jakob-Haringer-Str.3
A-5020 Salzburg
Web: www.bsr.at

Gryphon™ I GM4100 Configuring the Base Station

The base charger/station may be configured to hold the reader in two different positions, either a horizontal or standing position, in order to provide the most comfortable usage depending on needs.

Base station configurations



Standing



Horizontal

Changing the Base Station Position

The configuration is done by selecting one of two alternate sets of mechanical parts that are available with the cordless kit.

Insert the appropriate parts for the desired base station position, as shown below.



Standing

Horizontal

